

Scroll Evoke

7" TABLET PC

ANDROID™ 4.1 JELLY BEAN

by **Storage Options**



ANDROID™ 4.1 INSIDE

Instruction Manual

**CAUTION**

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



**TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE THE COVER.**

NO USER SERVICABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT
EXPOSE THIS UNIT TO RAIN OR MOISTURE**

CAUTION:

**TO PREVENT ELECTRIC SHOCK, ENSURE THE PLUG
IS FULLY INSERTED INTO A MAINS SOCKET**

IMPORTANT SAFEGUARD



All lead-free products offered by the company comply with the requirements of the European law of the Restriction of Hazardous Substances (RoHS) directive, which means our manufacturing processes and products are strictly “lead-free” and without the hazardous substances cited in the directive.



The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product’s end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste. Contact your local dealer for procedures for recycling this equipment.

DISCLAIMER

We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. The content of this manual is subject to change without notice.

Screenshots are for illustration purposes only and may not be representative of the actual product.

RECOMMENDATIONS

- **AVOID DUSTY LOCATIONS:** Excessive build-up of dust may cause the unit to fail.
- **DO NOT EXPOSE TO MOISTURE:** Exposing the unit to water poses high risk of electric shock.
- **DO NOT DROP:** Doing so could damage internal components.
- **DO NOT OPEN CHASSIS:** No user-serviceable parts inside.

TRADEMARK ACKNOWLEDGEMENTS

- Android™ is a trademark of Google.
- Microsoft & Windows are registered trademarks of Microsoft Corporation.
- All applications copyright © their respective owners.

WARRANTY AND TECHNICAL SUPPORT

To help you make the most of this product you’ll find a host of information including full product manuals, FAQ, troubleshooting guides and a support service if you have specific questions, available at our support website: www.storageoptions.com/support.

This product is also backed by a 12 month warranty in the unlikely event of something going wrong. More information and warranty registration is available at www.storageoptions.com/warranty.



storageoptions.com/support/



support@storageoptions.com

TABLE OF CONTENTS

QUICK START GUIDE	6
OVERVIEW	6
CONVENTIONS USED IN THIS MANUAL	7
PURPOSE OF THIS MANUAL	7
PACKAGE CONTENTS	7
BASIC OPERATION	8
6.1 – Buttons & Connections	8
6.2 – Power On / Off	9
6.3 – Using The Touch Screen	9
6.4 – Unlock The Screen	9
6.5 – Camera Shortcut	9
CHARGE THE BATTERY	10
HOME SCREEN	11
DISPLAY ORIENTATION	12
SETTINGS MENU	13
NETWORK CONNECTIVITY	14
11.1 – Connect To A Wireless Access Point	14
11.2 – Connect To A 3G Network	15
APPLICATIONS	16
12.1 – The Applications Menu	16
12.2 – Applications & Widgets	17
12.3 – Pre-Installed Applications	17
12.4 – Pre-Installed Widgets	17
12.5 – Pre-Loaded Applications	18
12.6 – SlideMe Marketplace	18
12.7 – Add More Applications	18
12.8 – Add A Shortcut To The Desktop	19
12.9 – Remove A Shortcut From The Desktop	19
12.10 – Uninstall Applications	19
GOOGLE PLAY STORE	20

TABLE OF CONTENTS (CONTINUED)

WEB BROWSER	21
VIDEO PLAYBACK	22
14.1 – Playback On Scroll	22
14.2 – Play 3D Content On Your HDTV	23
7DIGITAL MUSIC SERVICE	24
WILD TANGENT GAMES SERVICE	25
DEFENX ANTI-VIRUS	26
SOCIAL NETWORKING	27
18.1 – Facebook	27
18.2 – Twitter	27
BUILT-IN CAMERAS	28
MEMORY EXPANSION WITH MICRO SD CARD	29
CONNECT TO A COMPUTER	30
BLUETOOTH CONNECTIVITY	31
SYSTEM RESET	32
PRODUCT SPECIFICATION	33
WARRANTY AND PRODUCT SUPPORT	34



QUICK START GUIDE

Please follow this quick start checklist to guide you through using your Storage Options Scroll Evoke:

1. Check the package contents.
See section “*Package Contents*” (page 7) for more details.
2. Charge the battery.
See section “*Charge The Battery*” (page 10) for more details.
3. Remove the protective film.
Peel the protective film off the tablet’s screen.
4. Familiarise yourself with the physical buttons and connections, powering on, and touch screen control.
See section “*Basic Operation*” (page 8) for more details.
5. Connect to a wireless network for web browsing.
See section “*Network Connectivity*” (page 14) for more details.
6. Familiarise yourself with the included applications.
See section “*Applications*” (page 16) for more details.

OVERVIEW

Scroll Evoke is a capacitive touch-screen Android 4.1 Dual Core tablet that incorporates Bluetooth wireless technology. Portable, with its highly responsive 7” IPS screen, powerful hardware and a stylish, slim design, the Scroll Evoke is the perfect companion for internet browsing, games, videos and a host of other applications.

A powerful Dual Core 1.6GHz processor combined with a speedy Quad-Core Mali-400 Graphics Processor mean that the Scroll Evoke is capable of handling demanding games and online content seamlessly. Add the latest Android 4.1 (Jellybean) operating system, which is designed to optimise tablet enjoyment and functionality, and a great all round experience is guaranteed.

Scroll Evoke is also a highly versatile multimedia device; connect peripherals such as mice, keyboards and speakers, wirelessly and effortlessly with Bluetooth technology or watch your favourite film in full 1080p HD or 3D by connecting Scroll Evoke to your 3D or HD TV or monitor (via an optional high-speed HDMI cable).



- Powered by Android 4.1 (Jellybean)
- Intuitive 7” capacitive multi-touch IPS 1024 x 600 screen
- Dual core ARM Cortex A9 1.6GHz processor
- Quad Core Mali-400 graphics processor
- 8GB of onboard storage, expandable up to 32GB via Micro SD

*Bluetooth accessories, micro SD card and HDMI cable are available separately.

CONVENTIONS USED IN THIS MANUAL

At various points in this manual you will see highlighted text. Please refer here for an explanation:

NOTE Important notes are highlighted in blue.

TIP Tips on best practice are highlighted in green.

CAUTION Important cautions and warnings are highlighted in red.

PURPOSE OF THIS MANUAL

This manual is intended to give you a quick overview of the Scroll Evoke hardware and very basic functionality of the Android™ 4.1 operating system. It does *not* feature in-depth instructions for Android™ 4.1. The applications are provided “as-is” as a bonus for Storage Options customers. Please contact application developers directly for help and information on their software.

For more detailed information and instructions on the Android™ 4.1 operating system, please visit:

- <http://www.android.com/>

Google is also an excellent resource for help with the Android™ operating system.

- <http://www.google.co.uk/>

PACKAGE CONTENTS

Check the package contents against this checklist. If anything is missing or damaged, please do not use the system, and inform your supplier as soon as possible.

☐ Scroll Evoke

☐ USB cable

☐ Earphones

☐ Mains adapter

☐ On-The-Go (OTG) cable

☐ Instruction manual

BASIC OPERATION

Scroll Evoke has very few physical buttons. Most control is performed via the touch screen.

6.1 – BUTTONS & CONNECTIONS



BUTTON	ICON	DESCRIPTION
Power		Hold to turn the tablet on or off
Volume	 	Decreases / increases volume

CONNECTION	ICON	DESCRIPTION
Earphone		Connect earphones to this standard 3.5mm jack socket
Mini HDMI		Connect to your HDTV via HDMI cable
Micro SD		Insert a Micro SD card (up to 32GB)
USB		Connect peripheral devices (e.g. keyboard, USB flash drive)
DC 5V		Recharge Scroll Evoke's battery using the supplied mains adapter

OTHER	ICON	DESCRIPTION
Microphone	MIC	Used for audio recording
Front Camera	-	0.3MP camera – use to record yourself (e.g. in video calling applications)
Rear Camera	-	2.0MP camera – use to capture videos / still images (located on rear panel)
Speaker	-	Used for audio playback (located on rear panel)

ON-SCREEN	ICON	DESCRIPTION
Return		Moves back one step to the previous menu / page
Home		Returns immediately to the Android desktop
Menu		Displays a menu of recently opened applications

6.2 – POWER ON / OFF



Press and hold the  button until the tablet switches on. It will boot into the Android™ 4.1 operating system. This will take approximately one minute.


To turn the tablet off, press and hold the  button for approximately 3 seconds. A “Power Off” menu will appear on screen. Choose “OK” to complete shutdown or “Cancel” to resume use.

6.3 – USING THE TOUCH SCREEN

Scroll Evoke features a capacitive touch screen. To use it, simply touch any area on the screen – no pressure is required. Touch (A) an option to select it.

You can also “touch and drag” (B) to move items or scroll through lists by touching and holding, then gliding your finger over the screen.

Use a finger and thumb to “pinch zoom” (C) on-screen items such as photographs and web pages.

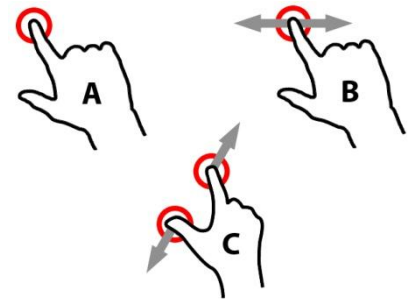


6.4 – UNLOCK THE SCREEN

Scroll Evoke operates in a similar manner to a touch-screen mobile phone. When it is first powered on, the Android™ operating system will boot, then you will be presented with a “locked” screen.

To unlock the screen:

1. If the screen is currently blank (Scroll is powered on but in standby), press the  button (short press, do not hold). The screen will turn on.
2. Touch and drag the padlock icon over to the open padlock symbol on the right side of the screen.

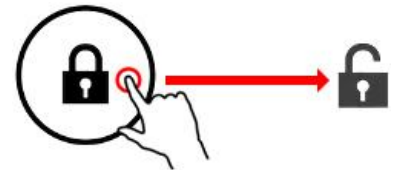


To lock the screen:

1. Press the  button (short press, do not hold).
2. The screen will go blank to conserve battery power.

6.5 – CAMERA SHORTCUT

From the locked screen, you can also unlock and go straight to the built-in Camera application by dragging the padlock over to the camera icon.



TIP

If the tablet is not used for approximately one minute, it will go to sleep to prolong battery life. This setting can be changed in “Settings” → “Display” → “Sleep”.

CHARGE THE BATTERY

It is recommended to fully charge Scroll Evoke overnight before first use. This will help prolong the useful life of the built-in battery.

To charge the battery:


- Insert the mains charger plug into the 5V DC socket (located next to the USB socket) on Scroll Evoke. Connect the mains adapter to a UK 3-pin electrical socket.



CAUTION

Do not use any mains adapter other than the one supplied. Using an incompatible adapter could damage the tablet and poses the potential risk of fire.

- If Scroll Evoke is powered off, it will charge until the battery is full.
- If Scroll Evoke is powered on, the battery charge status will be indicated on screen by the battery meter:

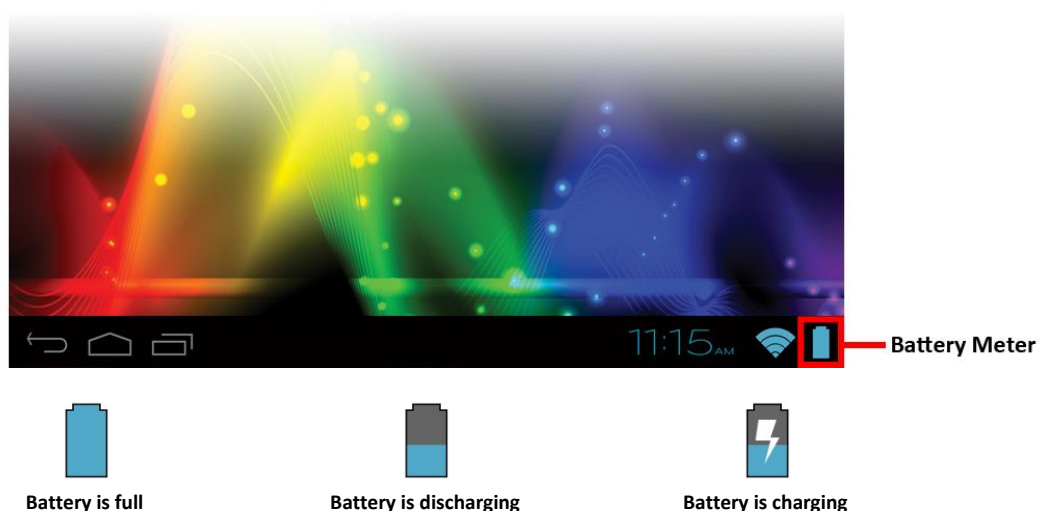


HOME SCREEN

The Home screen will look similar to the picture below. It is actually five screens, each of which can have a different layout of icons.

To switch between screens, simply slide your finger left or right across the display.

The status bar and navigation buttons are always visible, no matter which Home screen you are currently viewing.

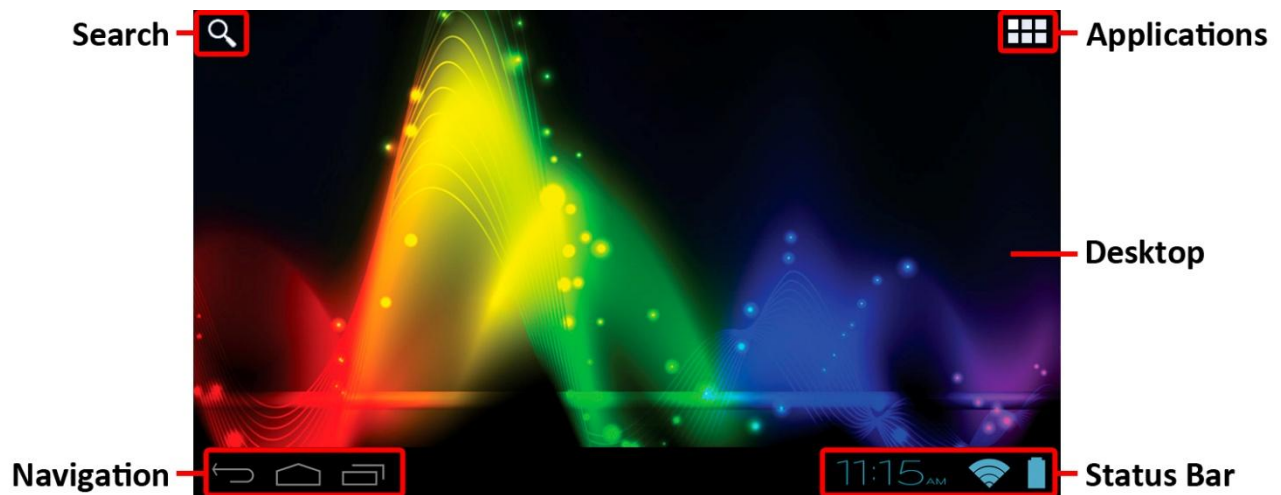

- The Desktop can contain shortcuts to your most-used applications and widgets.
- Touch the Search icon to quickly search the World Wide Web using Google.
- The  icon will launch the Applications menu.
- The status bar displays system information, such as current time, wireless connectivity and battery level. Touch to expand the status bar for more detailed information.
- The  button moves back one step to the previous menu / page.
- The  button returns immediately to the Android desktop.
- The  button displays a menu of recently opened applications.

DISPLAY ORIENTATION

Scroll Evoke features a built-in G-Sensor, which monitors the tablet's current orientation and automatically adjusts the display to match.



To re-orientate the display:

- Simply turn Scroll Evoke to portrait or landscape position, and the display will rotate to match.

NOTE

Some applications will lock screen orientation. Normal rotation functionality will resume once the application is closed.

Automatic screen rotation can be switched off, which is useful if you would prefer to use Scroll Evoke exclusively in portrait mode.

To switch off automatic rotation:

1. From the Home Screen, touch the  icon (located at the top right) to open the Applications menu.
2. Touch the "Settings" icon.
3. Select "Display".
4. Touch "Auto-rotate screen" to remove the tick from the checkbox. Scroll Evoke will be locked into portrait mode (except for applications that force landscape mode).

To switch automatic rotation back on, repeat the above steps and ensure there is a tick in the checkbox in step 4.

SETTINGS MENU

The Settings menu allows you to adjust Scroll Evoke's system configuration.

To change settings:

1. Touch the "Settings"  menu icon on the Applications menu. The Settings menu will open. 
2. Glide your finger up or down the left side of the screen to scroll through the list of available categories.
3. Touch a category title to view further options on the right side of the screen.

ITEM		ICON	DESCRIPTION
Networks	Wi-Fi		Connect to / disconnect from wireless networks, view connection status, etc
	Bluetooth		Connect to compatible Bluetooth devices
	Data usage		Enable / disable mobile data, view current usage, set mobile data limit, etc
Device	Sound		Change volume, touch sounds, screen lock sounds, etc
	Display		Change brightness, wallpaper, sleep settings, font size, etc
	HDMI		Switch HDMI output on / off, change resolution, adjust over scan
	Storage		Manage NAND and Micro SD card, view available capacity, etc
	Battery		See battery status and powered-on time
	Apps		Manage applications, running services, etc
Personal	Location services		Change approximate location detection, improve search results
	Security		Change screen lock type, encryption, passwords, credential storage, etc
	Language & input		Select language, add to the dictionary, edit on-screen keyboard settings, etc
	Backup & reset		Backup & restore data, perform factory reset, etc
	Add account		Add / remove accounts, change account synchronisation settings, etc
System	Date & time		Set date, time zone, time, clock format, etc
	Accessibility		Set up large text, auto-rotate screen, speak passwords, etc
	Developer options		Advanced functions for Android developers – debugging, HDCP check, etc
	About tablet		Information about your Android™ device

Some options will have a simple checkbox, while others will have a list of further settings to choose from. You should take time to become familiar with the options in these categories.

For more detailed information, please visit <http://www.android.com/>.

NETWORK CONNECTIVITY

The vast majority of applications support some kind of networking / Internet functionality. There are two ways to connect to the Internet using Scroll Evoke; either through your wireless router (access point) or by plugging in a 3G network dongle.


11.1 – CONNECT TO A WIRELESS ACCESS POINT

Scroll Evoke features standard wireless B / G / N capabilities, meaning it can connect to any router which is compatible with the 802.11b/g/n standard. Check your router's documentation to confirm compatibility.

NOTE You will need your router's wireless SSID and password to continue with these instructions.

To enable wireless networking and connect to your router:

1. Go to "Settings" → "Wireless & Networks" → "Wi-Fi" and slide the Wi-Fi switch to the right to enable it.

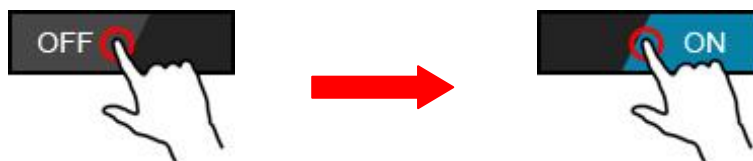

2. After a few seconds, Wi-Fi will be enabled and a list of available wireless network names (SSID) will appear. Locate your wireless network on the list and touch to select it.
3. You will be asked for the password. Type it in using the keyboard which automatically appears on screen.

TIP

If you do not know your wireless password, please refer to your router's instruction manual, or contact your Internet Service Provider (ISP).

4. Touch the "Connect" option to complete setup of your wireless connection.

NOTE Advanced users can touch "Show advanced options" to set up a proxy and / or manual IP configuration.

An icon will be displayed in the status bar to show wireless connection status:



Full signal



Moderate signal



Weak signal

Once you are connected to a wireless network, you can select it on the list, to view connection details (e.g. signal strength, link speed and IP address). You can use the "Forget" option to disconnect from the network and remove the stored password.

11.2 – CONNECT TO A 3G NETWORK

Scroll Evoke supports a variety of 3G dongles from various manufacturers.

To use a 3G dongle, simply connect it to the USB port on Scroll Evoke. It will automatically dial its Internet connection.



If your 3G dongle has a full-size USB connection, you will need to use the supplied USB On-The-Go (OTG) cable to adapt it for use with Scroll Evoke. Plug your 3G dongle into the large socket on the OTG cable, then plug the OTG cable into the USB port on Scroll Evoke.



Full signal



Moderate signal



Weak signal

NOTE


Storage Options cannot guarantee compatibility with every 3G dongle on the market. To test yours, simply plug it in and see if it connects to the Internet.

APPLICATIONS

Scroll Evoke supports a wide variety of applications. A small selection is pre-installed on the tablet and available from the applications menu, but many more can be downloaded from various websites.

12.1 – THE APPLICATIONS MENU

To open the Applications menu, touch the  icon at the top right of the Home screen.

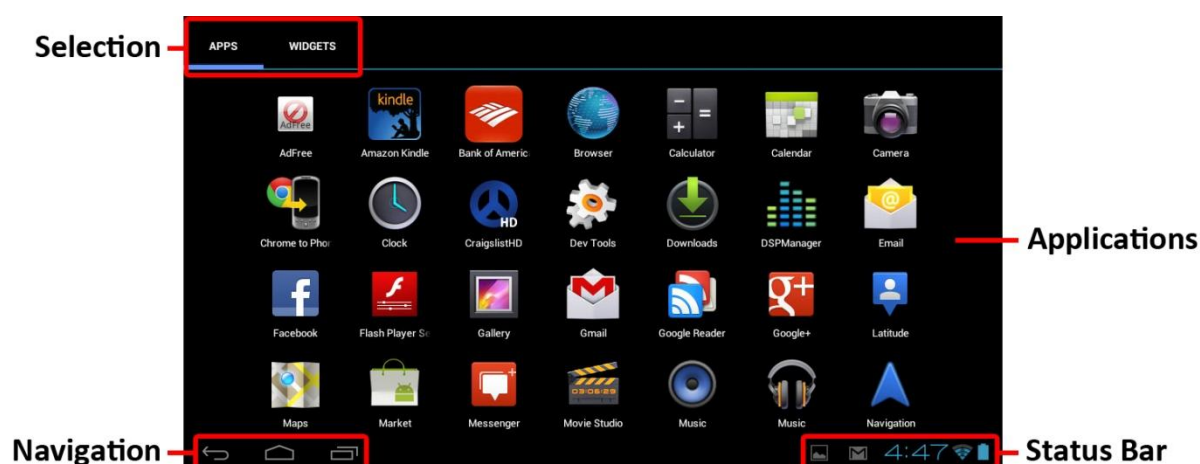

- Use the selection menu to choose between viewing installed applications and widgets.
- If you have more applications than can fit onto one page, slide your finger to the right across the screen to change to the next page.
- The status bar displays system information, such as system time, wireless connectivity and battery level. Touch it to expand and display more detailed information.
- The  button moves back one step to the previous menu / page.
- The  button returns immediately to the Android desktop.
- The  button displays a menu of recently opened applications.

*The above screenshot is for illustration purposes only, and is not representative of the applications included on Scroll.

12.2 – APPLICATIONS & WIDGETS

Applications:


- Applications provide expanded functionality to Scroll Evoke. A selection of applications is pre-loaded onto your Scroll Evoke tablet, and more can be downloaded from various websites.
- Applications usually take over the full screen when in use. You can use the physical “Home” and “Return” buttons to quit a full-screen application.

Widgets:

- Widgets give enhanced functionality to Scroll Evoke’s desktop by providing live updates such as news headlines, e-mail notifications, current time, and more.
- Some widgets are preinstalled, and others are installed along with their application counterparts.

12.3 – PRE-INSTALLED APPLICATIONS

These applications are pre-installed on Scroll Evoke:

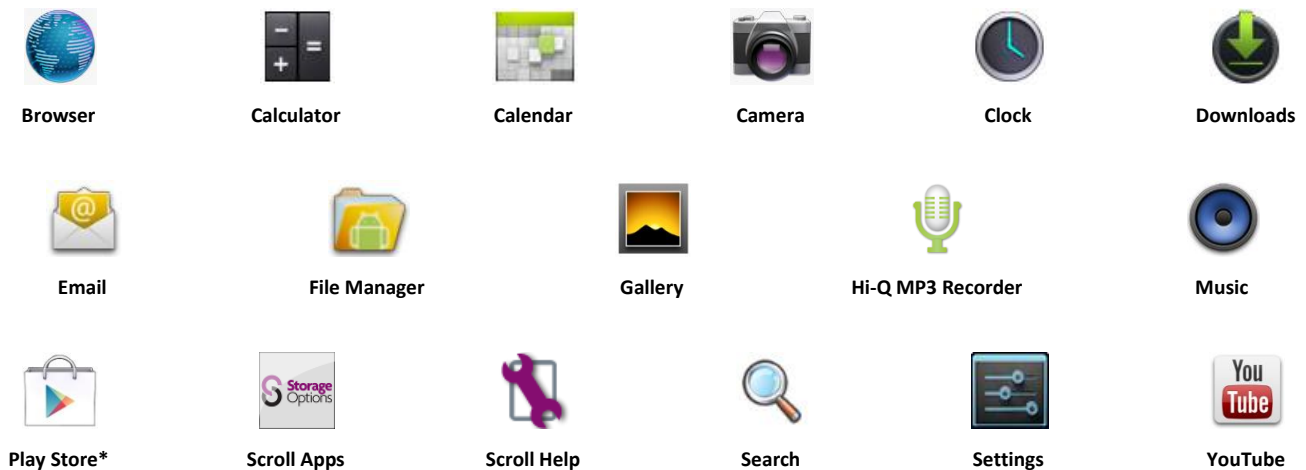

*Gmail account is required for access to the Google Play Store.

To access and launch the pre-installed applications, touch the  icon on the Home screen to display the Applications menu.

12.4 – PRE-INSTALLED WIDGETS

These widgets are pre-installed on Scroll Evoke:

- **Analog clock:** Displays a real time graphical analogue clock on the desktop
- **Bookmark:** Displays a single web page bookmark on the desktop
- **Bookmarks:** Displays multiple web page bookmarks on the desktop in a group
- **Calendar:** Displays upcoming appointments in your calendar
- **Contact:** Add one of your e-mail contacts to the desktop
- **Email:** Shows real time updates to your e-mail inbox

Please see <http://www.android.com> for more information about widgets.

12.5 – PRE-LOADED APPLICATIONS

Scroll Evoke has several applications which are pre-loaded onto the internal memory. You will need to install them before you can use them.



To install the preloaded applications:

1. From the applications menu, touch the “Scroll Apps”  icon. “Easy Installer” will load and a list of preloaded apps will appear on screen.
2. Touch to place a tick in the check box next to each application you wish to install.
3. Touch the “Install selected apps” button at the bottom of the screen, then follow the onscreen instructions.

These applications are pre-loaded on Scroll Evoke:



7digital



Adobe Reader®



Aldiko



Amazon Kindle™



BBC News



Chrome



Defenx



Evernote



Facebook



Quick Sys Info Pro



SlideMe Market



TuneIn Radio



Twitter



WildTangent

12.6 – SLIDEME MARKETPLACE

SlideMe Marketplace is pre-loaded onto Scroll Evoke. Once you have installed it using the method described above, you can launch the marketplace and browse available applications. For support and further information on SlideMe Marketplace, please visit <http://slideme.org>.



12.7 – ADD MORE APPLICATIONS

There are thousands of applications available for Android™ from various websites. It is possible to download application (.apk) files on a computer, then transfer them to Scroll Evoke using the supplied USB cable. See section “Connect To A Computer” (page 30) for more details.

Here are some recommended websites:

- Opera Mobile Store
- Handango
- Freeware Lovers

<http://mobilestore.opera.com>

<http://www.handango.com>

<http://www.freewarelovers.com>

12.8 – ADD A SHORTCUT TO THE DESKTOP

You can add shortcuts onto the desktop for quick access to your favourite applications. Shortcuts can be placed anywhere on the desktop grid, so you can organise them in whichever manner you like.

To place a shortcut on the desktop:

1. Open the Applications menu by touching the  icon at the top right of the Home screen.
2. Touch and hold your favourite application's icon.
3. The Applications menu will close and you will be returned to the desktop on the Home screen. A faint blue grid will appear which shows you where you can place the shortcut.
4. Drag the shortcut anywhere on the grid, then release it to place it in that position.

TIP

To place a widget on the desktop, you can follow the procedure above, but switch to Widgets on the selection menu after step 1.

12.9 – REMOVE A SHORTCUT FROM THE DESKTOP

If you would like to remove an application shortcut from the desktop, you can do so. To remove a shortcut:

1. Touch and hold the shortcut icon you would like to remove. A message stating “X Remove” will appear at the top of the screen.
2. Drag the icon over this message. Once it turns red, release the icon and the shortcut will be removed.

TIP

You can also use this method to remove widgets from the desktop.

12.10 – UNINSTALL APPLICATIONS

To uninstall an application (i.e. completely remove it from your tablet), follow this procedure:

1. Open the Applications menu and touch the “Settings”  icon.
2. Touch the “Apps” option on the left of the screen, then filter the list that appears by choosing “Downloaded”, “On SD Card”, “Running” or “All”.
3. Touch the application you would like to remove, choose “Uninstall” from the options that appear on screen, then touch the “OK” option to confirm.



GOOGLE PLAY STORE

Scroll Evoke features access to the Google Play Store*, the official marketplace for new applications, music, books, movies and games for Android.





NOTE



A Google account is required to use the Play Store. You can sign in using your existing gmail account, or sign up for a new one if you do not already have one.

To use Google Play Store:

1. Open the Applications menu by touching the  icon at the top right of the Home screen, then touch the Play Store  icon to launch Google Play Store.

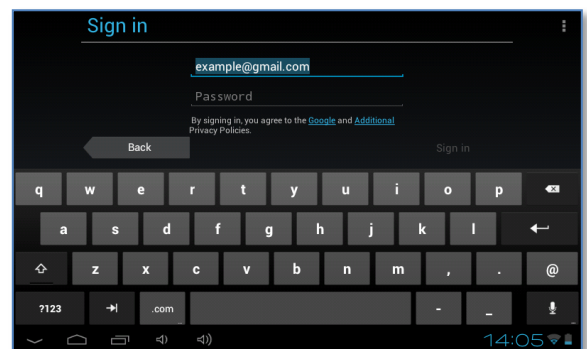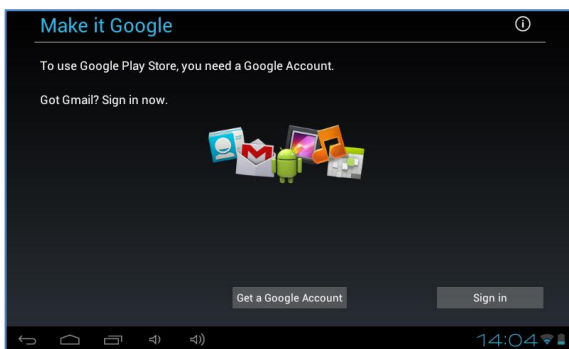

2. If you do not already have a gmail account, touch the “Get a Google Account” option. Follow the on-screen instructions to set up a new account. If you already have a gmail account, touch the “Sign in” option. On the next page you will be asked for your account credentials. Type them in using the on-screen keyboard, then touch “Sign in”.
3. Follow the on-screen instructions to complete the sign in process. You may be asked if you would like to join Google+, add credit card details for store purchases and set up backup functionality; all of these steps are not mandatory so you can choose to either skip them or fill in the details.
4. Browse Google Play Store; download free applications, purchase music and films, and play the latest games!

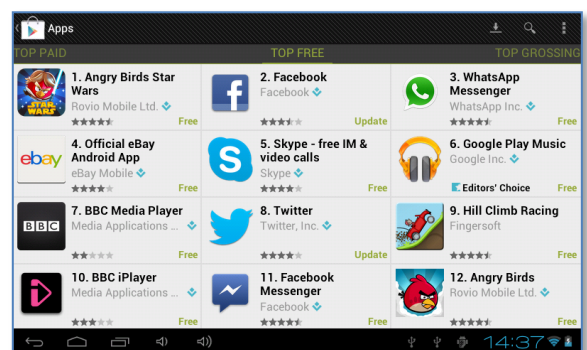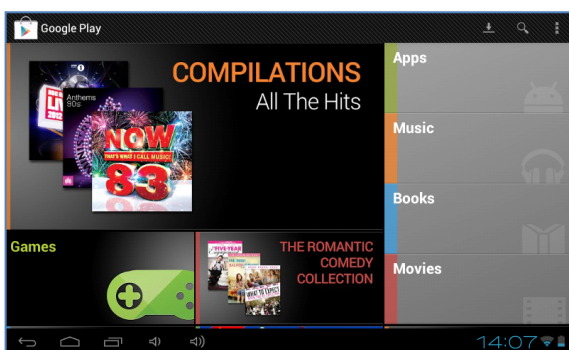

*Storage Options cannot guarantee compatibility with every application available on Google Play Store.

WEB BROWSER


Scroll Evoke has a built-in browser which can be used to browse the World Wide Web, in the same way you would use a browser on a desktop computer or laptop.

To use the browser:

1. Touch the “Browser”  icon on the Applications menu. The browser will open.
2. By default, the browser will automatically load Google.



NOTE Make sure you are connected to your wireless network before opening the browser.

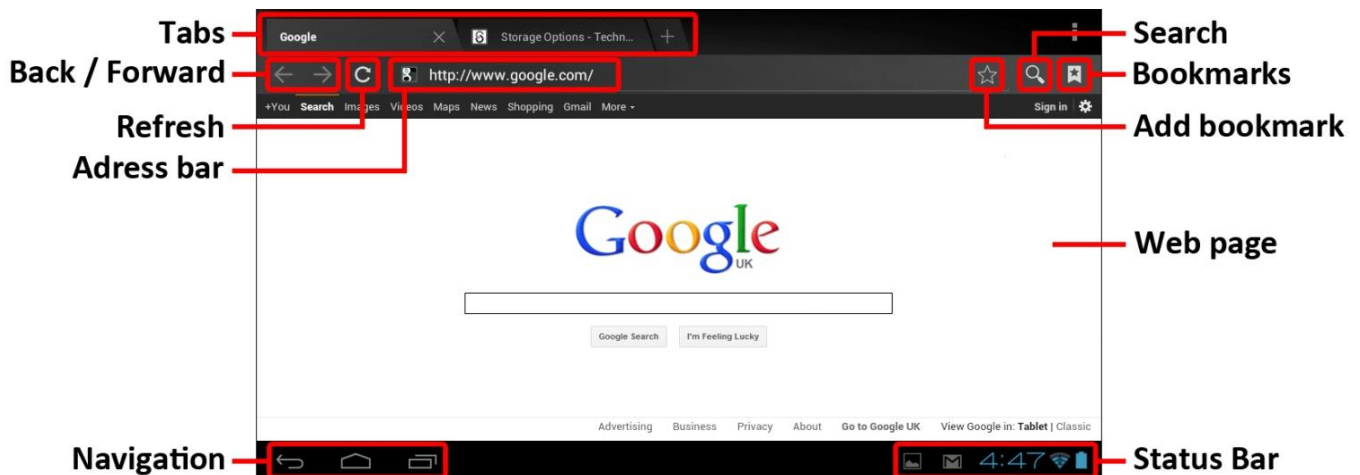

- Use tabs to load multiple websites and switch between them.
- Use the address bar to go directly to a website if you know its address.
- Use $\leftarrow / \rightarrow$ (back / forward) and  (refresh) to navigate pages in the current tab.
- Touch the  icon to bookmark the current page.
- Touch the  icon to select any previously stored favourite websites.
- Touch the  icon to perform an Internet search.

VIDEO PLAYBACK

Scroll Evoke is a powerful portable media player. The “Gallery” application can play video and display photos that are stored on either internal memory or a Micro SD card.

To use the Gallery:


1. Touch the “Gallery”  icon on the Applications menu. The Gallery application will open. 
2. The Gallery will automatically find your media and arrange it in a thumbnails view. If you have multiple folders, it will show them first. Touch a folder to select it, then you will be shown the media files in that folder.
3. Touch the thumbnail to play the file.

TIP

To view more information about a file (such as duration, size and location), touch and hold its thumbnail, then touch the  button and select “Details”.

14.1 – PLAYBACK ON SCROLL

Video files will play back in full screen mode. For a few seconds during the start of playback, the user interface will be displayed:

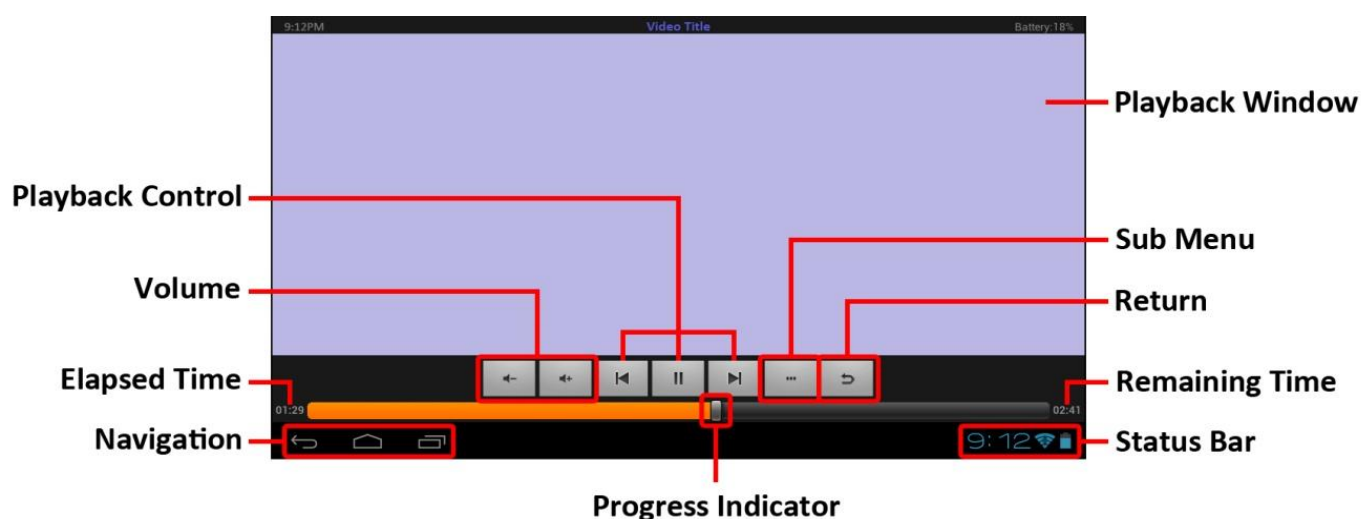

- Use playback control buttons to play / pause or skip backwards / forwards between videos.
- Drag the progress indicator left or right to fast forward or rewind the video.
- The Sub Menu provides further options for subtitles, repeat play, aspect ratio etc.
- Touch the screen to reactivate the controls after they have disappeared from view.

14.2 – PLAY 3D CONTENT ON YOUR HDTV

Scroll Evoke can also be connected to your big-screen HDTV for Full HD and 3D video playback.

NOTE You will need a 3D compatible Mini HDMI to HDMI cable to connect to a 3D HDTV.

To connect to your HDTV:

- 1. Using a Mini HDMI to HDMI cable (sold separately), plug the Mini HDMI connector into Scroll Evoke’s Mini HDMI socket, and the full size HDMI plug into your HDTV’s HDMI socket.



- 2. Switch to the appropriate input on your HDTV. Refer to your TV’s manual for instructions on how to do this.
- 3. Scroll Evoke will automatically detect the HDMI connection and display an image on your TV screen.

Scroll Evoke supports 3D video playback on a compatible 3D HDTV. Simply play your 3D video in the same way you would play 2D video, and on your 3D HDTV select the appropriate 3D mode (left/right or top/bottom, see examples below). Refer to your TV’s manual for instructions on how to do this.

VIDEO MODE	DISPLAY	TV MODE
Left / Right		L/R
Top / Bottom		T/B

7DIGITAL MUSIC SERVICE

7digital is a digital music content delivery and management application. With over 17 million tracks available in MP3 format from all major labels, 7digital has something for everyone.



The 7digital application is pre-loaded on Scroll Evoke. See section “12.5 – Pre-Loaded Applications” (page 18) for instructions on how to install.

To use 7digital:

1. On the Applications menu, touch the 7digital application to launch it.
2. You will be presented with the latest releases and you can swipe across the screen to see more.
3. When you try to purchase music, you will be asked to either create an account, or sign in to your existing account. You can also sign in from the options menu; touch the  button then go to “Settings” → “General” and choose “Sign In”.

There are many functions available in 7digital. Refer to <http://www.7digital.com> for full information. To get started quickly, you should become familiar with these icons:

- Use the  function at the top of the screen to type a search term for your favourite artist.
- Touch  to switch to your local music collection. This can include music purchased from 7digital and / or music stored on your tablet (e.g. on a Micro SD card).

TIP

It is recommended to store your music collection in a folder called “Music” in the root of the card.

- Touch  to switch back to the home screen where you can browse the latest releases.

To change the default currency:

1. Touch the  button at the top right of the screen, then choose “Settings”.
2. Scroll down the list until you find the “General” section, and touch “Country”.
3. Choose your preferred country from the list on screen. The currency displayed on the 7digital store will change to match.

NOTE

For support and further information on the 7digital music service, please visit <http://www.7digital.com>.

WILD TANGENT GAMES SERVICE

WildTangent provides a gaming service for Scroll Evoke where users can trial, rent or own top games, based on WildCoins. WildCoins are a digital currency which can be purchased in packs or as a subscription. Users can also play for free in exchange for viewing an advert from a brand advertiser.



The WildTangent Games application is pre-loaded on Scroll Evoke. See section “12.5 – Pre-Loaded Applications” (page 18) for instructions on how to install.

To use WildTangent:


1. Open the WildTangent Games application from the Applications menu.
2. Sign into your account, or if you do not have one, select the “Create an account” option. Follow the on-screen instructions to create an account.
3. The main interface will launch and automatically show the latest games. Browse the featured games on this page, or touch the “Find Games” button to search for a specific type of game.
4. Touch a game’s icon to view details.



The “My Games” tab shows all games currently installed on Scroll Evoke. Touch a game’s icon to launch it.

Touch and hold a game icon to open a sub menu with the following options:

- **Play** to launch the game
- **Uninstall** to remove the game from Scroll Evoke
- **Stop Renting** if you wish to discontinue renting (if applicable)

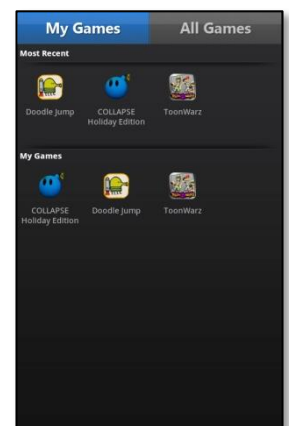

TIP

Games installed via the WildTangent application will also be available to launch from Scroll Evoke’s own Applications menu.

While in the WildTangent application, press the  button to launch the context menu for further options.

NOTE


For support and further information on WildTangent, please visit <http://www.wildtangent.com>.

DEFENX ANTI-VIRUS


Defenx AntiVirus is powerful and easy-to-use to protect your tablet from viruses, spyware and malicious applications that can make it unusable or lead to loss of data. A trial version of the Defenx Anti-Virus application is included with Scroll Evoke.



The first time you run Defenx, it will ask you for a product key. This field will already be completed with a trial key which allows use of the software for 30 days.

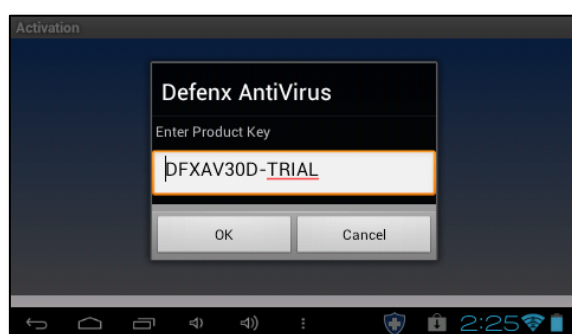

After this time, if you wish to continue using Defenx Anti-Virus, you will need to purchase a full licence. You must accept the licence agreement to use the software.

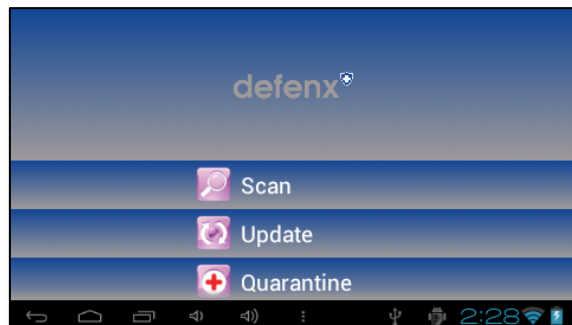

Defenx Anti-Virus is simple to use. There are just three options on the main screen:

OPTION	DESCRIPTION
Scan	Scans the internal memory for viruses / spyware.
Update	Checks for updates to the anti-virus definition files. Scroll Evoke must be connected to the Internet for this to work.
Quarantine	Lists files that have been placed in quarantine by Defenx Anti-Virus.

NOTE Defenx Anti-Virus will also automatically scan the contents of a MicroSD card when it is inserted.

For more information and help with Defenx, please see <http://www.defenx.com>.

SOCIAL NETWORKING

Scroll Evoke is capable of connecting to your favourite social networking systems. You can either do this via the built-in web browser (see section “Web Browser”, page 21) or via dedicated applications. To install these pre-loaded applications, please see section “12.5 – Pre-Loaded Applications” (page 18).


18.1 – FACEBOOK

Facebook is the most popular social networking experience. Keep in touch with your friends, share photo albums and use instant messaging. The first time you use the Facebook application, you will be required to accept an “End-User License Agreement” to use it. Touch the “I agree” option to continue.



If you already have a Facebook account:

1. Touch the “Email” field to display the on-screen keyboard and type your e-mail address.
2. Touch the “Next” option, then type in your password.
3. Touch the “Done” option, then choose “Login”.
4. Interact with your friends!

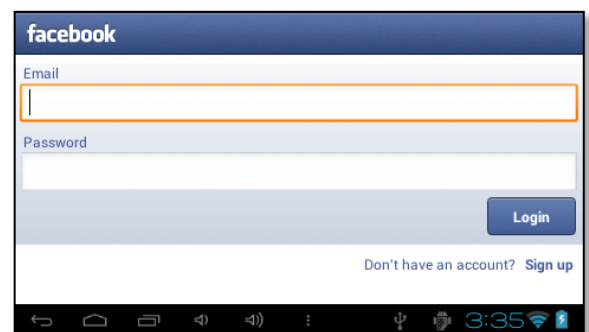

If you do not have a Facebook account, touch the “Sign up” option at the bottom right of the screen. For more information and help with Facebook, please see <http://www.facebook.com>.


18.2 – TWITTER

Twitter allows you to connect to the information that is most important to you. You can follow tweets from friends, celebrities, experts, news crews and more. The first time you use Twitter you can either search for interests, or sign in to your account to follow tweets.



If you already have a Twitter account:

1. Touch the “Sign In” option, then the “Username or email” field to display the on-screen keyboard and type your e-mail address.
2. Touch the “Next” option, then type your password.
3. Touch the “Done” option, then choose “Sign In” at the bottom of the screen.
4. Interact with your friends!

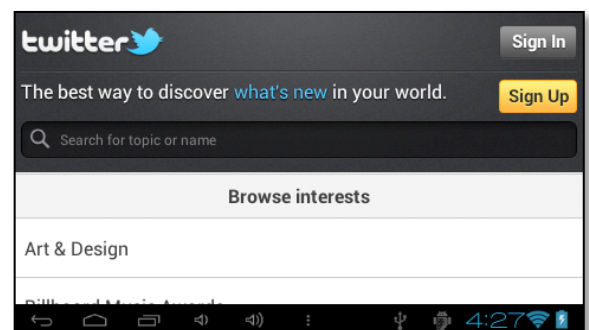

If you do not have a Twitter account, touch the “Sign Up” option at the top right of the screen. For more information and help with Twitter, please see <http://www.twitter.com>.

BUILT-IN CAMERAS

The Camera application lets you take photographs and record video clips using the built-in cameras.

- Launch the “Camera”  application from the Applications menu by touching the Camera icon:



- Touch  to switch between the front and rear cameras.
- Use the Viewport to align the scene you would like to capture.
- Slide the Zoom indicator along its track to zoom in or out.
- Touch  to change white balance, exposure and other settings.
- Touch the Capture button to record.

There are three camera modes:

ICON	CAPTURE BUTTON	DESCRIPTION
		Still picture mode
		Video recording mode
		Panoramic still mode – capture very wide photographs


MEMORY EXPANSION WITH MICRO SD CARD

Scroll Evoke features built-in flash memory, which can be expanded using a Micro SD card (not included). You may use any Micro SD or Micro SDHC card, up to 32GB capacity.

The best way to use a Micro SD card is to treat it as media storage; transfer media files (videos, music and photos) from your computer to your Micro SD card in the usual manner, then insert it into Scroll Evoke as shown.

To insert and use a Micro SD card:


1. Push the Micro SD card into the slot as indicated in the diagram below, until it clicks and locks in place.
2. Scroll Evoke will automatically mount the Micro SD card for use.

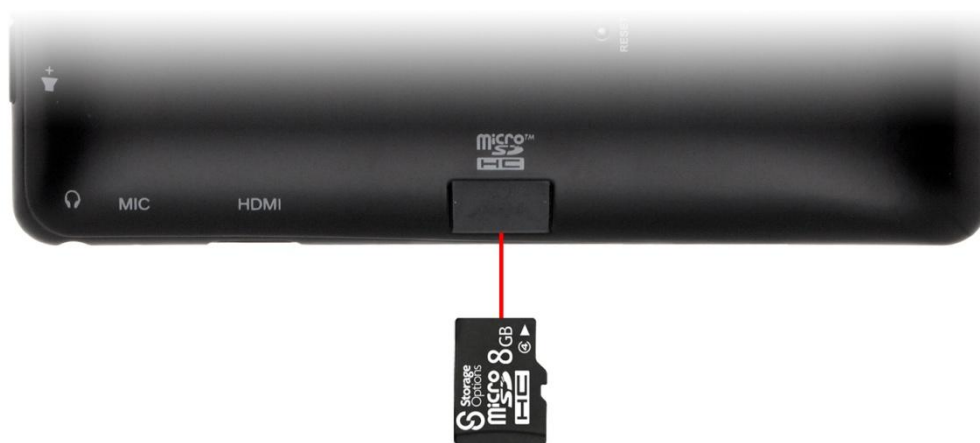

To eject a Micro SD card:

- Push the Micro SD card inwards slightly until it clicks, then release pressure. It will pop out from the socket.

It is recommended to organise your Micro SD card by creating folders for different types of media in the root:

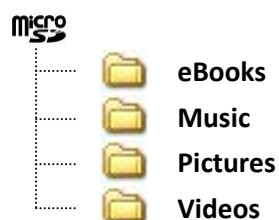

Place your media files in the respective folders. This may help if you need to instruct an application where to look for media files.

NOTE

For third party applications you may need to point them to the Micro SD card to read your media files. Refer to the instructions specific to each application for directions on how to do this.

CONNECT TO A COMPUTER


Scroll Evoke can be connected to a computer running Microsoft Windows for file transfer via USB cable.

To connect to a computer:

1. Using the supplied USB cable, plug the mini USB connector into Scroll Evoke's USB socket, and plug the full-size USB plug into an available USB socket on your computer.



2. Windows may present you with a "New Hardware Wizard". Please click the "Cancel" option to close this.
3. On Scroll Evoke, touch the status bar at the bottom of the screen.
4. Touch the "USB connected" option, then choose "Turn on USB storage".

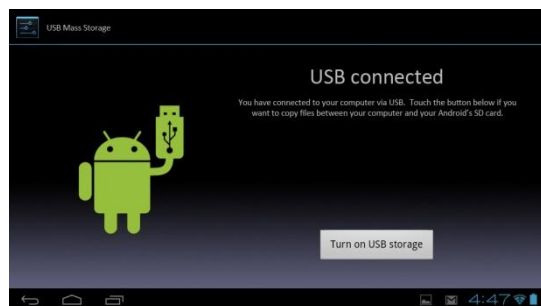

Scroll will appear as mass storage on your computer and will be assigned the next available drive letter within "My Computer" or "Windows Explorer".

Drag and drop files from your computer's storage drives onto Scroll Evoke, just like you would with any other external storage device.

NOTE Scroll Evoke does not charge via USB cable. Please connect it to a mains supply to recharge the battery.

To disconnect from a computer:

1. Touch the "Turn off USB storage" button to un-mount the flash memory.
2. Disconnect the USB cable.

NOTE Failure to un-mount the flash memory could prevent Android™ applications from being able to access the memory, and cause erratic behaviour. Always un-mount before disconnecting the USB cable.

BLUETOOTH CONNECTIVITY


Scroll Evoke supports connectivity with other Bluetooth-compliant products such as keyboards and mice. Bluetooth products must be “paired” to Scroll Evoke.

To pair a Bluetooth device:

1. Go to “Settings” → “Wireless & Networks” → “Bluetooth” and slide the switch to the right to enable it. After a few seconds, Bluetooth will be enabled and a list of nearby Bluetooth devices will appear.



2. “Scroll Evoke” will be listed as your device, with a message that states “Not visible to other Bluetooth devices”. Touch this to make Scroll Evoke visible to the device(s) you would like to pair. A 2 minute countdown will commence, before the tablet becomes invisible again.

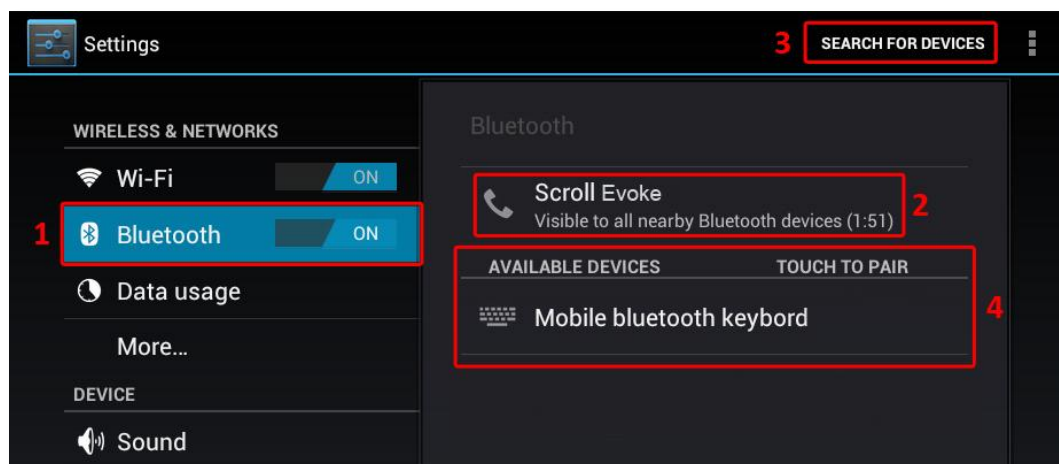

3. Touch the “Search for devices” option at the top right of the screen to search for nearby Bluetooth products and refresh the list.
4. Within the 2 minute countdown, touch the listed device to pair it with Scroll Evoke, then follow the device’s pairing procedure as explained in its instruction manual. Your paired device will appear in the “Paired Devices” list as connected, and any other devices will appear in the “Available Devices” list below.

TIP

For some devices such as keyboards, Scroll will ask you to type a combination of keys to confirm the pairing. You must do this to pair your keyboard / keypad to Scroll Evoke.

To disconnect a paired Bluetooth device:

1. Touch the  button next to the listed device.
2. Select “Unpair” from the menu.

SYSTEM RESET



A system reset allows you to return the tablet back to factory default settings.

CAUTION

Resetting to factory defaults will erase all data from the tablet's internal storage. You *must* do a back up of any important data *before* performing this procedure.

To reset your tablet to factory defaults:

1. Touch the “Settings”  menu icon on the Applications menu. The Settings menu will open.
2. Scroll down to the “ Backup & reset” menu item, and touch to select it.

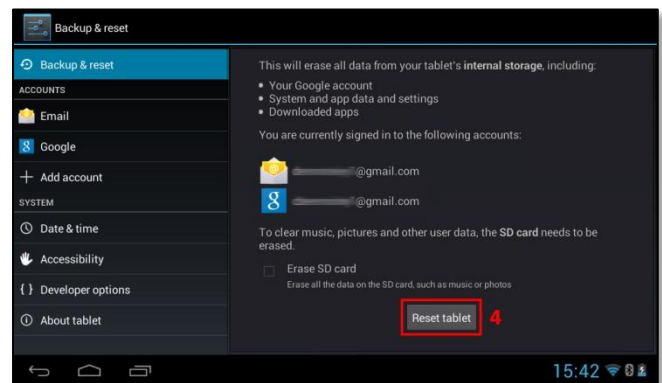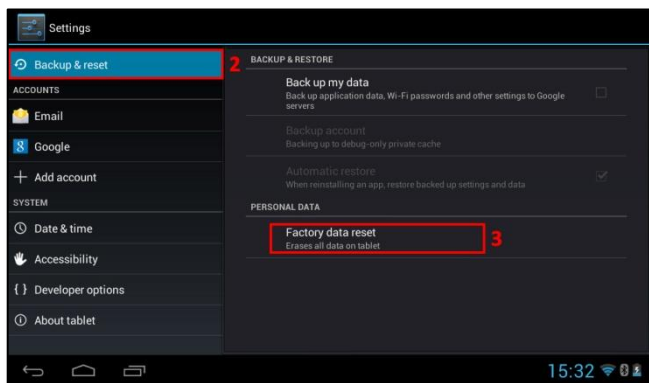

3. Select “Factory data reset”. Android will warn you that you are about to erase everything on the tablet's internal storage, including:
 - Your Google account
 - System and application data and settings
 - Downloaded applications

A note states “To clear music, pictures and other user data, the SD card needs to be erased”; this message is referring to the internal memory (virtual SD card) on your tablet. It *does not* mean an inserted Micro SD card!

Selecting this option is not advisable as it will *delete the pre-loaded Scroll Apps* from the tablet, meaning you will not be able to reinstall them once the tablet has been reset. If you are sure you want to erase the internal memory (virtual SD card), please make a backup of the “Scroll Apps” folder (either to Micro SD card or your computer) first.

4. Select the “Reset tablet” option. Android will ask you if you are sure; touch the “Erase everything” button to confirm this. The tablet will shut down, perform the reset procedure, and then reboot.

NOTE

The reset procedure may take some time. Once the procedure is complete, the tablet will take longer to reboot than before. This is normal, and will only happen for the first boot after resetting the tablet.

PRODUCT SPECIFICATION

Scroll Evoke	
	
Hardware	
Unit Size (mm):	125 (W) x 188 (H) x 10 (D)
Unit Weight:	350 g
CPU:	RK3066 Dual Core ARM Cortex A9 1.6GHz
RAM:	1GB
GPU:	Mali-400 2D / 3D graphics processor
Built-in Storage:	8 GB
Storage Expansion:	Micro SD card, up to 32 GB (not included)
Display:	7" capacitive multi-touch
Resolution:	1024 x 600
Cameras:	Front 0.3MP, Rear 2.0MP
Battery Type:	Rechargeable lithium
Battery Capacity:	3000mAH
USB Port:	1x USB
Speaker:	8Ω / 1W
Wireless Connectivity:	802.11b/g/n, Bluetooth v.3.0
3G Support:	Limited support for 3G dongles
Software	
Operating System:	Android™ 4.1.1
Web Browser:	Pre-installed
Video Support:	AVI, H.264, MPEG2, MPEG4, MKV, MP4
Audio Support:	MP3, AAC, AC3, WAV
Photo Support:	JPEG, BMP, GIF, PNG, TIFF
3D Capabilities:	OpenGL ES 2.0 / 1.1, OpenVG 1.1 rendering

WARRANTY AND PRODUCT SUPPORT

If you are experiencing difficulties with your product, or have questions which are not answered in this instruction manual, our dedicated support site offers a wide range of clearly written FAQs, manuals and user guides which are designed to help you get the most from your purchase.



Visit our dedicated support site at storageoptions.com/support/ for FAQs, manuals and user guides

If you are unable to find an answer online, still experiencing issues or suspect your product to be faulty, our UK based customer service team is available to offer full support, and can be contacted via the support pages of our website.



Submit a service request online if you cannot find an answer to your problem



A member of our **UK based support team** will review your case and offer the highest level of advice and support

If our team believes that the product in question is faulty, we will issue a returns authorisation and arrange for a replacement to be sent free of charge.*



Return the product free of charge* – a pre-paid shipping label will be issued to return the product



Within 5 to 10 days a replacement product will be sent at no charge to you



Replacement product delivered directly to you

Please contact us directly if you have any queries or concerns:



storageoptions.com/support/



support@storageoptions.com

Our aim is to provide the best possible service to our customers. We have a wealth of support material, guides and FAQs available on our website to help you get the most from your product. Our dedicated UK based Customer Service team are also on hand to offer further support and, in the unlikely event of any fault developing with your purchase, we have a full returns procedure designed to make receiving a replacement product as quick and easy as possible.

*Free replacement service applies to UK Mainland (excluding Scottish Highlands) only. Storage Options reserves the right to charge for delivery to, or collection from, other locations.

NOTES

Scroll Evoke

by **Storage** Options



Storage Options Scroll Evoke

Made in China